



FLAT PLATTER (Wider Rim)
P 1061 Ø 31.5 cm. (12³/₈") 990 g.



FLAT PLATE (Wider Rim)
P 1058 Ø 28.5 cm. (11¹/₄") 800 g.



FLAT PLATE (Wider Rim)
P 1059 Ø 22.0 cm. (8⁵/₈") 410 g.



SOUP PLATE (Wider Rim)
P 1060 Ø 24.5 cm. (9⁵/₈") 570 g.



PASTA PLATE (Wider Rim)
P 1062 Ø 26.5 cm. (10³/₈") 650 g.



COFFEE POT W/LID
P 3547/L. 1.10 ltr. (38.72 oz.) 725 g.



TEA POT W/LID
P 3548/L. 1.10 ltr. (38.72 oz.) 717 g.



SUGAR BOWL W/LID
P 3519/3546L. 0.29 ltr. (10.03 oz.) 240 g.



CREAMER
P 3520 0.34 ltr. (11.79 oz.) 193 g.



COFFEE & TEA CUP
P 3509 0.26 ltr. (9.15 oz.) 160 g.
COFFEE & TEA CUP SAUCER
P 1063 Ø 15.5 cm. (6¹/₈") 175 g.




COFFEE CUP
P 3508 0.23 ltr. (8.1 oz.) 166 g.
COFFEE CUP SAUCER
P 1063 Ø 15.5 cm. (6¹/₈") 175 g.



COFFEE CUP (TALL)
P 3507 0.19 ltr. (6.69 oz.) 135 g.
COFFEE CUP SAUCER
P 1063 Ø 15.5 cm. (6¹/₈") 175 g.



AD. CUP
P 3513 0.12 ltr. (4.05 oz.) 88 g.
AD. CUP SAUCER
P 1064 Ø 12.5 cm. (4⁷/₈") 96 g.

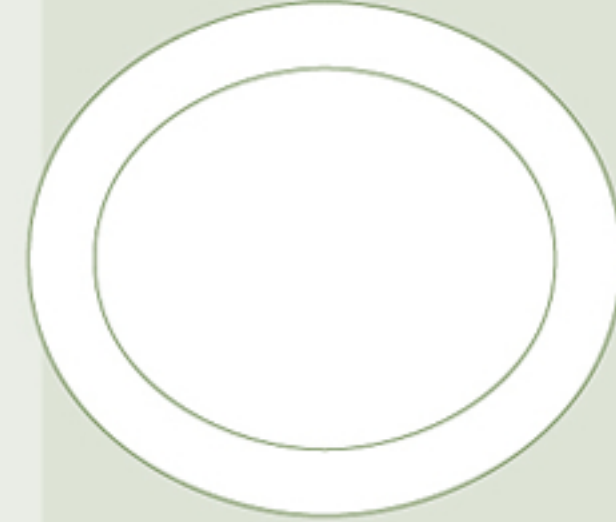

OVAL PLATTER
P 1026 Ø 38.0 cm. (15") 1,331 g.
P 1018 Ø 35.0 cm. (13³/₄") 1,100 g.



SOUP TUREEN WITH LID
P 3549/L. 3.0 ltr. (105.6 oz.) 2,062 g.



SALAD BOWL
P 3523 Ø 23.0 cm. (9¹/₈") 1,074 g.
P 3524 Ø 20.0 cm. (7⁷/₈") 744 g.
P 3525 Ø 16.0 cm. (6¹/₄") 333 g.
P 3545 Ø 18.5 cm. (7¹/₄") 600 g.



FRUIT DISH
P 3534 Ø 16.0 cm. (6¹/₄") 189 g.



CEREAL BOWL
P 3533 Ø 13.5 cm. (5³/₄") 209 g.



CEREAL BOWL
P 3538 Ø 14.0 cm. (5¹/₂") 253 g.



SALT SHAKER
P 3531 H. 7.5 cm. (3.0") 84 g.
PEPPER SHAKER
P 3532 H. 7.5 cm. (3.0") 84 g.



MUG
P 3530 0.33 ltr. (11.62 oz.) 230 g.

Size could be varied ± 2 percent
Capacity could be varied ± 10 percent